

T&C Power Conversion. Inc.

110 Halstead Street
Rochester, New York, 14610

Phone: 1- 585 - 482 - 5551
FAX: 1- 585 - 482 - 8487

E-Mail : Sales @ TPowerConversion.com

LA10S

LINEAR AMPLIFIER

OPERATION MANUAL



We offer various electronic products and engineering services: RF Linear Amplifiers, RF Power Drivers, AC to DC Power Supplies, Microprocessor Based Controllers, Analog Instruments . . .

IF YOU CAN'T FIND IT, WE WILL DESIGN IT!

Table Of Contents:

<u>Topic:</u>	<u>Page:</u>
• APPLICATIONS	3
• INSTALLATION	3
• SPECIFICATIONS	4
• OPERATION	5
• TYPICAL GAIN Amplifier “A”	6
• TYPICAL GAIN Amplifier “B”	7
• SAFETY	8
• WARRANTY	8
• SERVICE	9

Applications:

The LA10S is a general-purpose, air-cooled amplifier suitable for a broad range of uses including:


- *Optical and Laser Component Excitation*
- *RFI / EMI Susceptibility Testing*
- *Medical Applications*
- *Materials Testing*
- *Manufacturing Processes*

Installation:

LA10S is designed for bench operation. To guarantee the best performance, make sure there is adequate clearance for the entrance of cooling air to the front of the unit as well as for the exhaust out the back of the unit. (6"min.)

The LA10S is set for operation with a single phase, 50 to 60Hz. Unit does not require any special internal adjustments if operated within the specified voltage range. The LA10S can be operated from 100 to 120VAC and 200 to 240VAC without any adjustment.

Please check the following items before applying AC power to the LA10S:

- *Check Unit for any physical damage that could affect safety.*
- *Ensure the AC power cord is an IEC type with a 10 Amp or greater rating with a proper safety ground connection.*
- *Ensure the AC power cord is plugged into a properly grounded outlet.*
-  *Connect LA10S chassis to a proper safety ground. (Use Grounding Stud on rear panel) A green insulated 18-gauge wire or heavier less than 50 feet in length is recommended.*

Specifications:

Class of Operation:	Class "A"
Frequency:	Amplifier A: 100 Hz to 1 MHz Amplifier B: 1 MHz to 450 MHz
Frequency Band Switch	Control at isolated type "BNC" Connector on rear panel. TTL/CMOS compatible signal used for selection of required amplifier. Control Input marked SLCT IN on rear panel (Low) 0 VDC or open = Amplifier A (High) +5 to +12 VDC = Amplifier B
RF Output Power:	10 W typical Linear for "A" and "B"
Gain:	40 dB, ± 1.5 dB
RF Power input drive:	-10 dBm to 0 dBm (1 mW) typical, +5 dBm max.
Input & Output Impedance:	50 Ohms
Input & Output VSWR:	1.2:1 max Input/3:1 max Output
Harmonic Level @ 10 Watts:	<-30 dBc, -20 dBc or better for third harmonic
Spurious Output:	Greater than - 50 dBc
RF Input / Output connectors:	Type "N" female
Operating Temperature:	0°C to 40°C
Humidity:	80 %
AC input requirement:	100 to 120 VAC/200 to 240VAC, 50 to 60 Hz.
Circuit Protection:	Internally fused at the DC power supply, 15 A Standard Fuse, Onboard P.S. # LDA300W
Power Connection:	EMI / RFI Filter with IEC Standard Power Entry
Cooling:	Forced Air
Dimensions:	H 89 x W 480 x 419 mm. (H 3.5" x W 19" x D 16.5")
Weight:	9 kg (20 lbs.)
Mounting:	Stand-alone unit. (Front panel fits rack mount)
Case:	Front Panel: T & C Platinum, Cover: T & C Platinum

Operation:

The LA10S is a bench top mounted laboratory amplifier with standard front panel features. On the left end of the front panel is the **AC line** power ON / OFF switch. This heavy-duty double pole switch connects and disconnects the hot and neutral power line connections. The amplifier is shipped from the factory internally wired for 100 to 120 and 200 to 240 VAC, 50 to 60 Hz.

The green indicator lamp shows that AC power is connected to the unit, the power switch is on and the DC power is available to the amplifier. The amplifier has 50-Ohm N-type radio frequency coaxial connectors on the rear panel for connection of the signal source and connection to the load. The user must confirm that the connecting cables are rated at 50-Ohm impedance, principally for the output connection. This will assure that power is not reflected back to the amplifier due to a cable impedance mismatch.

The default amplifier is Amplifier "A". When the LA10S is ON, with no input to the SELECT Input, Amplifier "A" will be connected to the IN and OUT on the rear panel. If an input of 0 VDC is provided to the SELECT Input, Amplifier "A" will still be selected. The amplifier will perform to the Amplifier "A" specifications.

When a DC level of 5 to 12 Volts (High) is applied to the SELECT input, the LA10S will connect Amplifier "B" to the IN and OUT on the rear panel. The amplifier will perform to the Amplifier "B" specifications.



If the 5 to 12 VDC is removed from the SELECT input, the LA10S will revert to Amplifier "A".

In normal operation, the forward power is at a maximum proportional to the driving signal applied to the input while the reverse power is a relatively small portion of that power. Few loads are perfectly resistive and exactly 50 Ohms so some reflected power is typical. The opposite extreme, a faulty load (either open or shorted) results in a significant reflective power typically near the level of the forward power

A wide area of ventilating holes serve as the air intake for ventilating the amplifier. Linear class "A" operation has low distortion benefits and necessitates removal of the heat generated by this bias mode. ***The air intake must be kept clear of obstructions*** as should the fan outflow at the rear of the unit. Allow a minimum of 6" clearance around all sides of the chassis.



TYPICAL GAIN RESPONSE

Amplifier "A"

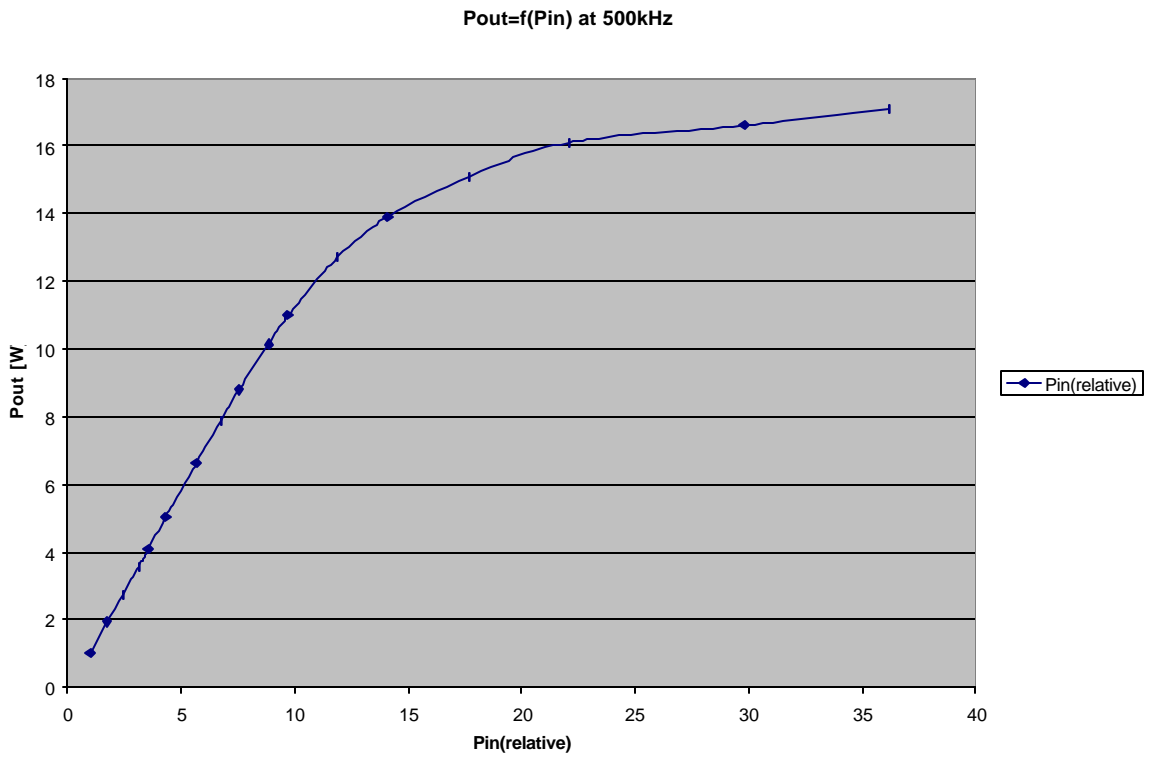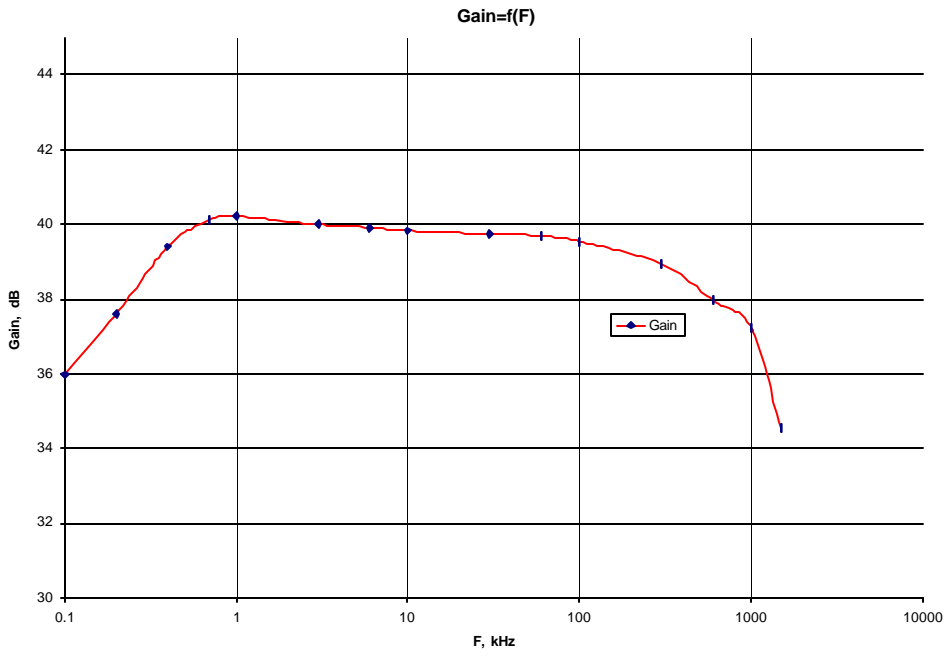

TYPICAL GAIN RESPONSE


Amplifier "B"

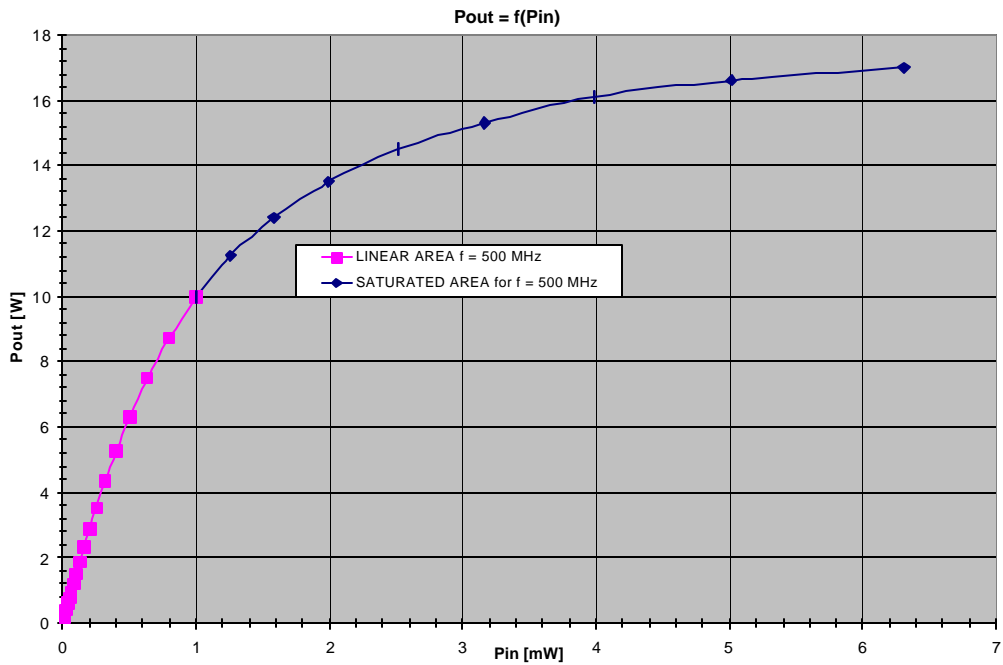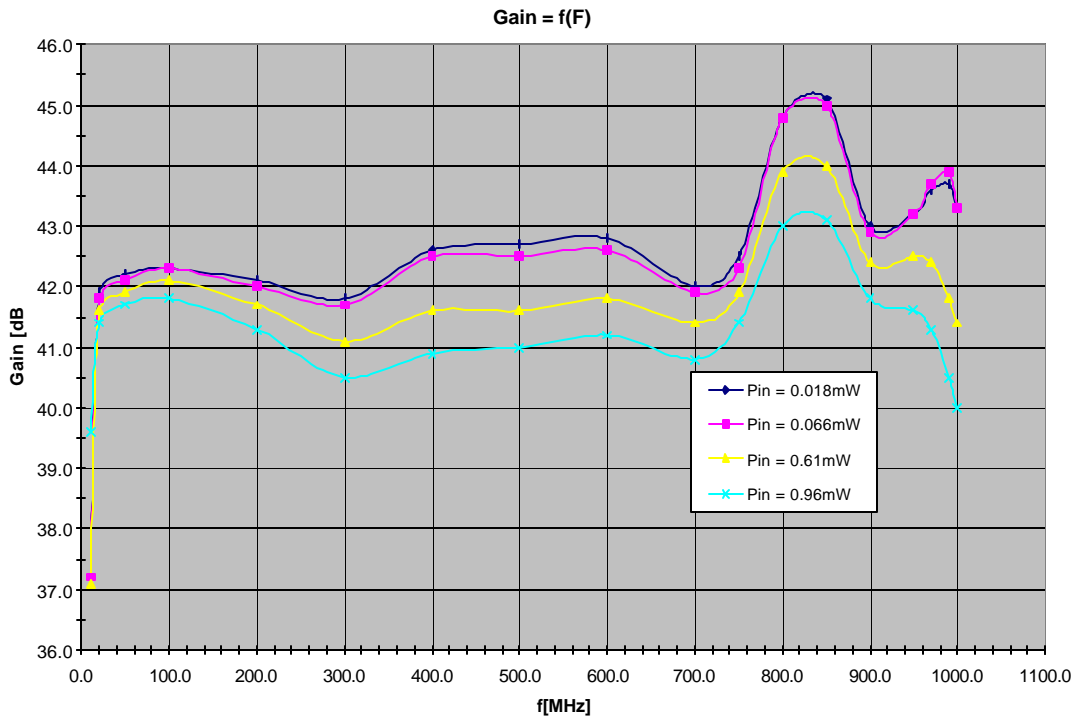

Safety:

Do not operate this amplifier with the cover removed. Lethal voltages are present beneath the cover. The cover protects against **electrical shock** due to AC line voltage, high RF potential in the hundreds of Volts at the output transformer, coupler and output connections. Also the DC supplies produce high voltages in the conversion process and are capable of producing more than 25 Amps of current at nominal output voltage.

The cover is an integral part of the air ducting system that keeps components cool. Without the cover in place, insufficient air flows between and around the two DC power supplies causing overheating of the internal components.

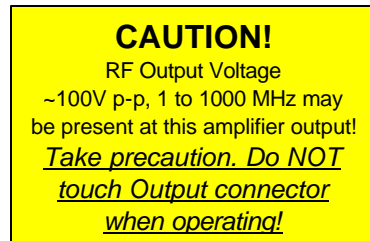

This label should remain affixed to the front panel just below the RF output connector. Always connect the load to the RF output connector before connecting the RF input to the amplifier. This will ensure that high voltage at the center pin of the output N connector will not be exposed. Take care not to interchange the input and output cables.

Be sure the chassis is grounded to a reliable earth ground using the grounding stud provided on the rear panel. In addition, be sure the grounding wire remains connected securely between the cover of the chassis and the base of the chassis.



Wherever this label appears, refer to corresponding cautionary information in the operators manual.

Warranty:

T & C Power Conversion warrants to the original purchaser for a period of one year from the date of delivery each instrument to be free from defects in materials and workmanship. For a period of one year, T & C will adjust, repair or replace defective parts, without charge to the original purchaser, so that the instrument performs according to its specifications.

If, in our opinion, the instrument has been damaged by accident, unreasonable use, buyer-supplied software or interfacing, improper site preparation or maintenance, or abnormal conditions of operation, repairs will be billed at standard rates. In this case, an estimate will be submitted before the work is started.

Service:

All repairs should be referred to the factory. There are no user serviceable parts or adjustments internally. If repair should be needed, pack the unit in its original packing carton using the padding provided and ship the unit to:

Returns Department
T & C Power Conversion Inc
110 Halstead Street
Rochester, NY 14610

Standard service for all out of warranty repairs will be billed at T&C's in-house standard repair rate. Call for current rates and turn-around time. (716-482-5551) Factory repairs of repeat or related failures are warranted for 90 days.

Standard service includes:

- *Thorough evaluation by the T&C Engineering Department*
- *Original top quality parts used*
- *Repairs with standard factory procedures*
- *12 hour burn-in to ensure reliability*
- *Quality control audit*
- *Calibration to meet current specifications*
- *Latest upgrades available*