

## AG 0x13 generator INTERLOCK En/Dis


To remove the top cover:

- 1.) remove the AG 0613 / 0613 from its setup, place on the bench, make sure AC Line is disconnected and AG 0613 is safe to open!
- 2.) remove top cover of the 0613 following the attached picture. Place hardware safely. There are 2 x M4 screws from the front panel and 8 x M3 from the top cover.
- 3.) lift the cover and turn to the right side. NOTE! The cover is connected to the chassis with green-yellow Safety GND wire. Do not disconnect it! Just turn it over to the side with the cover attached.



4a.) To **disable** the INTERLOCK function: lift the small shield cover, **install jumper in the place of JP4**. Put back the shield. Inspect the unit after your work. Gently place the top cover back in its positions paying attention to the Green-Yellow GND wire that must be placed along right panel inside of the unit. Make sure that wire did not get into the fan. Make sure all the interconnection cables in that area are re-connected!

4b.) To **enable** the INTERLOCK function: lift the small shield cover, **remove jumper from the place of JP4**. Put back the shield. Inspect the unit after your work. Gently place the top cover back in its positions paying attention to the Green-Yellow GND wire that must be placed along right panel inside of the unit. Make sure that wire did not get into the fan. Make sure all the interconnection cables in that area are re-connected!

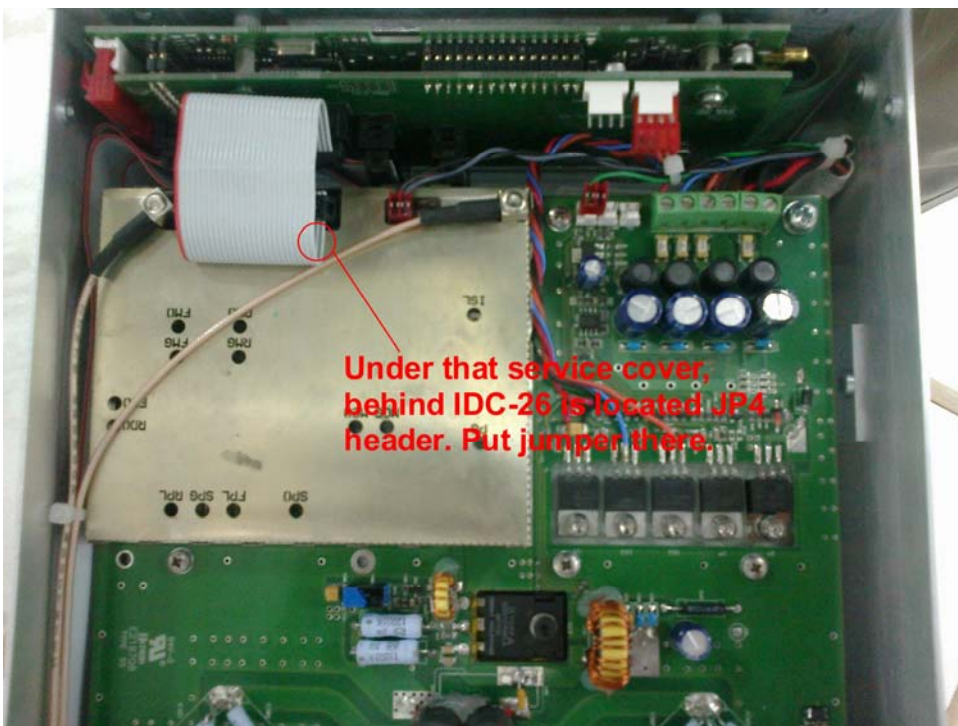

5.) place AG 0613/0613 back in the installation and re-test for all functions.